

4

3


2

1

TONKAFLO® Pumps SERIES AS14000

FLOW RANGE-80 TO 200 GPM HEAD RANGE - 85 TO 450 PSI
 STAINLESS STEEL STAGED PUMP PERFORMANCE CURVES - 3500 RPM

CUSTOMER _____ 60 Hz
 MODEL _____

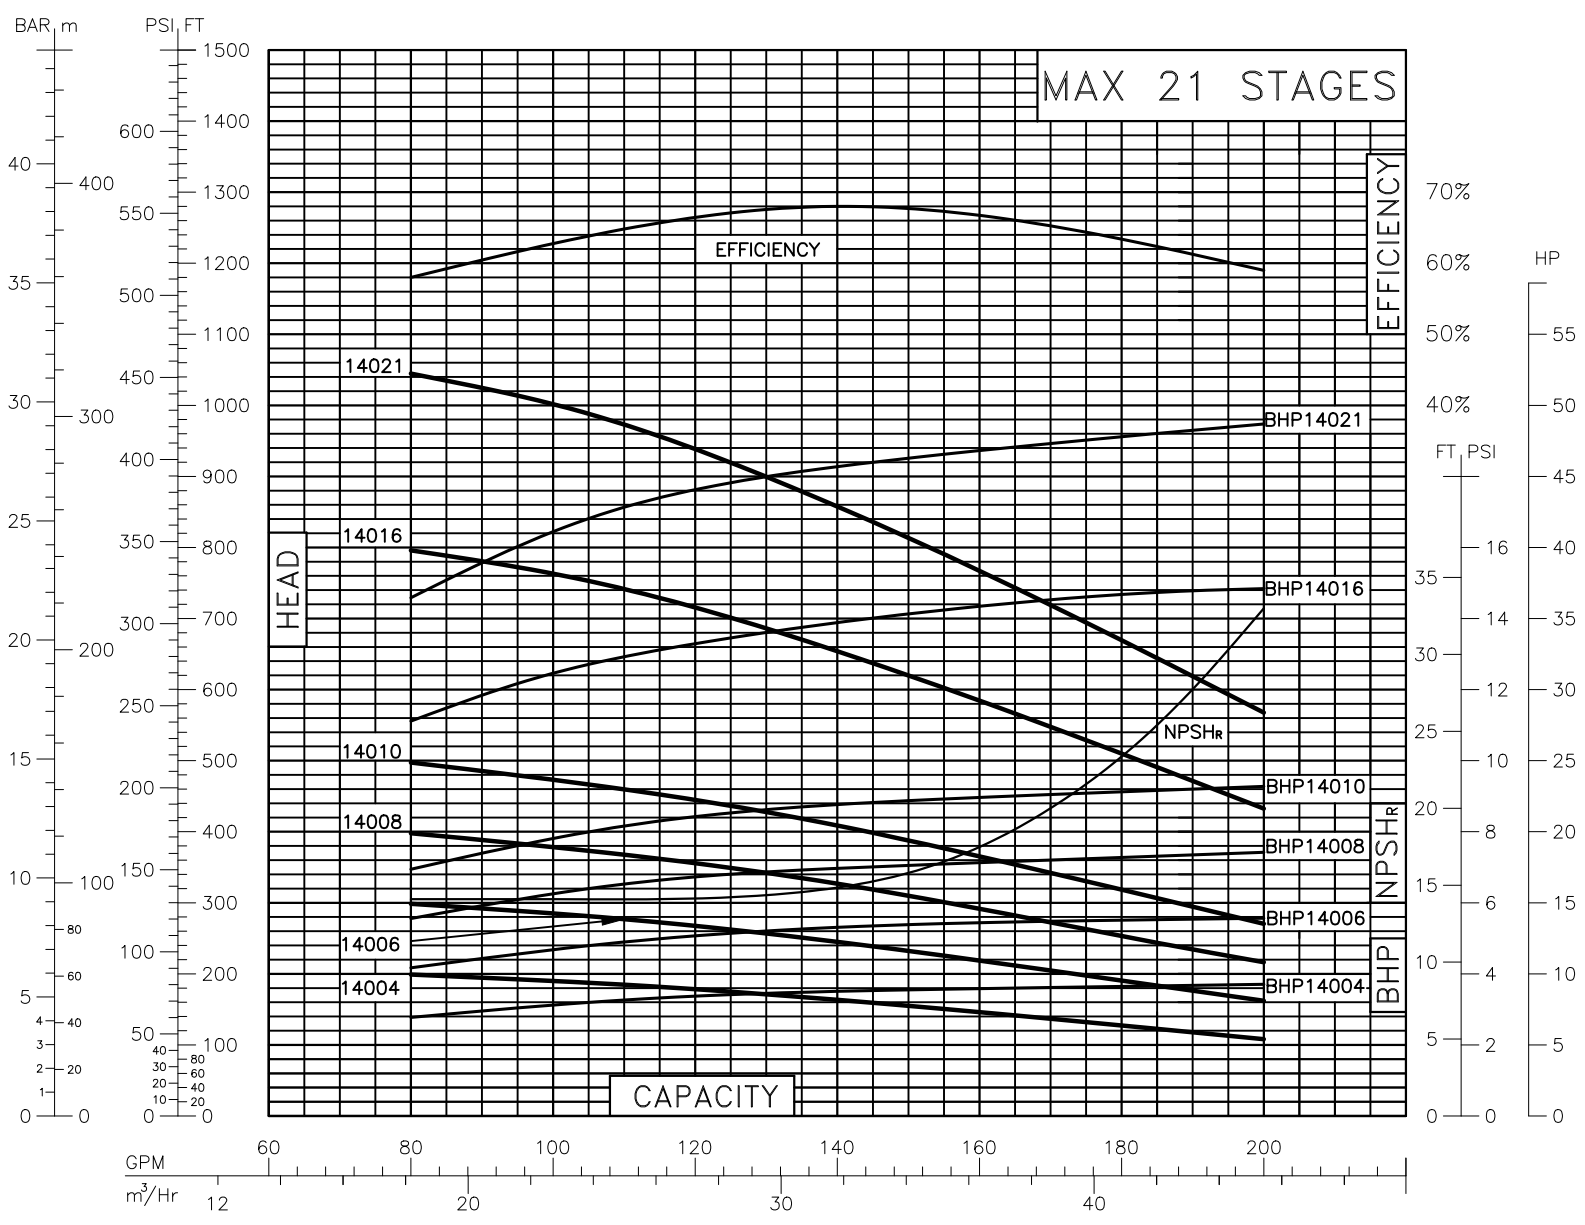


- NOTES:
1. BHP CURVES INDICATE HP REQUIREMENT AT THE PUMP SHAFT WHICH INCLUDES BEARING FRAME. MOTOR HP = BHP/MOTOR EFFICIENCY.
 2. DO NOT APPLY SERVICE FACTOR FOR SIZING THE MOTOR. FOR EXAMPLE, IF MOTOR HP CALCULATES TO 31.5 THE MOTOR SELECTION SHOULD BE 40 HP.
 3. FOR SIZES OTHER THAN THE STANDARD PUBLISHED, PLEASE CONSULT FACTORY.
 4. OPERATING ABOVE OR BELOW THE SPECIFIED RANGE COULD DAMAGE THE PUMP.

P/N 3064094 Rev B

suez Water Technologies & Solutions
 5951 Clearwater Drive Minnetonka, MN 55343-8995 USA • Phone 1-866-439-2837 • Fax 952-988-6060
<http://www.suezwatertechnologies.com>

B	SUEZ REBRANDING	131562	TG	SR	MS	19 Oct 18			
A	INITIAL RELEASE	14826	-	-	-	-			
REV	DESCRIPTION	ECO	DWN	APPR	APPR	DATE			

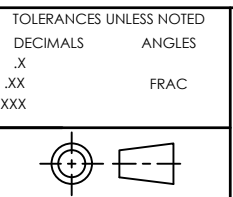

CUSTOMER INFORMATION

DWG,TF,PRFM CURVES,14000,
 4 INL,60 HZ

DRAWING NUMBER				REVISION
1310572				B
REF.:-	PROJECT NO.	PART/MATERIAL NO.	SCALE	SHEET
		3064094	N.T.S	1 OF 1

4

3

2

1

FILE LOCATION: C:\Users\j212724488\AppData\Local\Temp\AcP\Pub\1_21100\1310572.dwg